




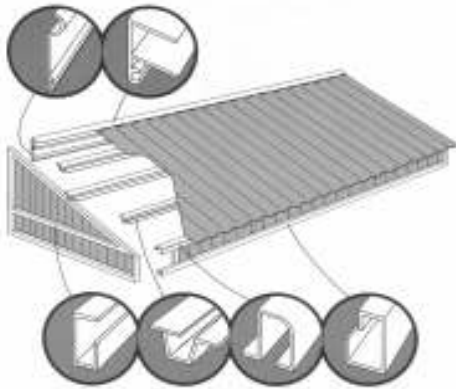


Allium

How to assemble an awning on-site




-  #14 x 2" stainless steel
-  Tek with washer (self-tapping)
-  #8 Robertson with washer
-  Tek, painted (self-tapping)
-  Tek, stainless steel (self-tapping)

1. Assemble the corners of the awning and screw with painted Tek screws. (N.B. The awning is upside-down.)



2. Continue by installing the rafters. Please note that the rafters must be installed in the correct position/direction.

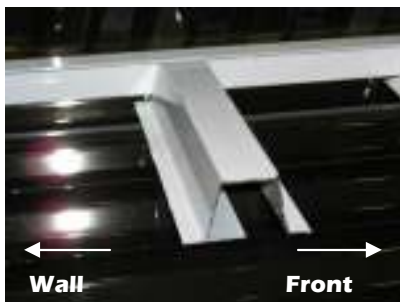


3. Turn the awning over. Screw the front rafter to the valence.



8100, rue de l'Industrie, Anjou (Québec) H1J 1S7

Tél.: (514) 352-9330 1-800-293-9330 Fax : (514) 352-1247
www.allium.com

4. The polycarbonate sheets must exceed the frame by 2". Add silicone to the edge of each sheet and overlap them by 1 corrugation. The frame must be square. Screw the first sheet and check the square of the frame before installing the other sheets.

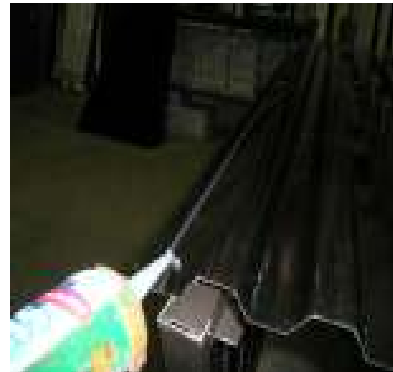

5. Fill the flashing with silicone. Drill a hole of 3/16" through the flashing and side of the awning. Screw the flashing and side of awning together with a #14 (2") screw. Screw the rest of the flashing with Tek stainless steel screws.



6. The awning is ready for wall installation.

